



300-WATT POND DE-ICER

Thank you for choosing the Aquascape 300-Watt Pond De-Icer.

At Aquascape, our goal is to supply our customers with the best valued products in water gardening. We hope you enjoy your purchase and thank you for choosing Aquascape. *Your Paradise. Our Passion.*®



TABLE OF CONTENTS	
Safety Information	,
Instructions for Use	,
Troubleshooting	



3 YEAR WARRANTY

The Aquascape 300-Watt Pond De-Icer is guaranteed for three years from date of purchase. Proof of purchase required. Warranty does not cover damage resulting from negligent handling, misuse or lack of reasonable maintenance or care. Warranty is valid

against defects due to material and the company's workmanship only. The sole obligation shall be to replace the defective unit with a suitable replacement unit. Units should be checked for proper operation prior to returning as defective. No liability for loss or damage of any nature or kind, whether arising out of or from the use of the product, whether defective or not defective, is assumed by Aquascape, Inc. or its affiliates.

CONTACT US

For more information about our company or products please visit our website at www.aquascapeinc.com or call (US) 1-866-877-6637 (CAN) 1-866-766-3426.





SAFETY INFORMATION

WARNING: We recommend that you store your Aguascape 300-Watt Pond De-Icer indoors, when not in use or after the winter season. Inspect cord before using. Do not use extension cords. Read all instructions carefully, before installation. Take extreme caution when working on or near a frozen pond. Never walk on thin ice.

CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only, using the following guidelines:

- (A) Have a qualified electrician install a properly grounded receptacle outlet, acceptable for outdoor use and protected from snow and rain, immediately adjacent to the location where the Aquascape 300-Watt Pond De-Icer will be used
- (B) Route supply cord and locate the heater so as to be protected from damage by live stock
- (C) Do not use extension cords
- (D) Inspect cord before using
- (E) Unplug Aguascape 300-Watt Pond De-Icer at receptacle outlet when not in use or before removal from pond
- (F) Store Aquascape 300-Watt Pond De-Icer indoors after winter season, or when not in use

INSTRUCTIONS FOR USE

STEP ONE: We recommend floating the Aguascape 300-Watt Pond De-Icer over the deepest part of the pond. If the ice is completely frozen, laying the heater on its side will enable it to melt through the ice slowly. You may have to adjust or reorient the heater in an upright position as it starts to melt through the ice. Be patient, heater may take several hours to completely melt through. Never break the ice with force; the shock will stress fish and could cause unnecessary fish loss. We recommend floating the heater in the pond for about one hour before plugging in the unit, allowing the unit to calibrate to the water temperature.


STEP TWO: Plug the electrical cord into a GFI-regulated power receptacle. The indicator light will be red when the unit is warm or heating and blue when it is cool or not heating.


CAUTION: When indicator light is red the unit will be very hot. Do not touch unit when indicator light is red. Make sure unit is unplugged and given time to cool, before touching.

STEP THREE: In the springtime, or when heater is no longer needed, unplug the unit and let sit in the pond for at least one hour, to allow for proper cooling.

Prior to storing the unit, when not in use, we recommend that you clean the outside surface with a mild acid, like white vinegar, and then rinse thoroughly with clean tap water. This will remove calcium deposits and will not damage the stainless steel finish. Allowing calcium deposits to build up on the unit may impede the thermostat from working correctly.



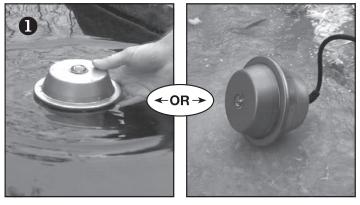


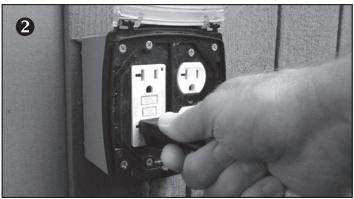



USING THE POND DE-ICER WITH AN AQUASCAPE AERATION SYSTEM

PLEASE NOTE: If you are also using an Aquascape aeration system in addition to the Aquascape 300-Watt Pond De-Icer, place the aerator or air stone beneath the De-Icer to increase the degassing effect.

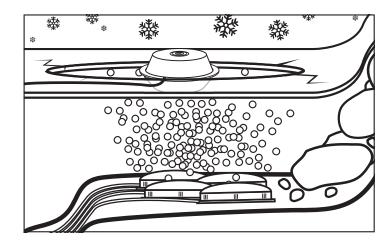

TROUBLESHOOTING

In the event that the Aquascape 300-Watt Pond De-Icer should malfunction or fail to operate, please check the following:

- Check to ensure that the unit is plugged in properly
- Make sure that the GFI-rated receptacle or ground fault interrupter is operating properly
- Check to see that the LED light on the top of the unit is indicating that the unit is heating. LED light will be red when unit is heating. If the indicator LED light on top of the unit is blue, the heater is in the off mode and not heating. The LED indicator light and thermostat is a safety function of the heater to prevent accidental burns. If not functioning correctly you may need to reset the thermostat by unplugging the heater, for approximately one hour, to allow the heater to completely cool. When you plug in the heater the LED indicator should turn red, indicating heating.

PLEASE NOTE: The thermostat on the heater is set to turn off at 70°F or 21°C, the thermostat or safety shut off is a safety feature and not meant to turn off the heater when ice is not present.

For more information about our company or products, please visit our website at www.aquascapeinc.com or call us at (US) 1-866-877-6637 (CAN) 1-866-766-3426

©2013 Aguascape, Inc. • All Worldwide Rights Reserved