



### 1 Install Internal Cellular Antenna

- (Plastic case cabinet only)

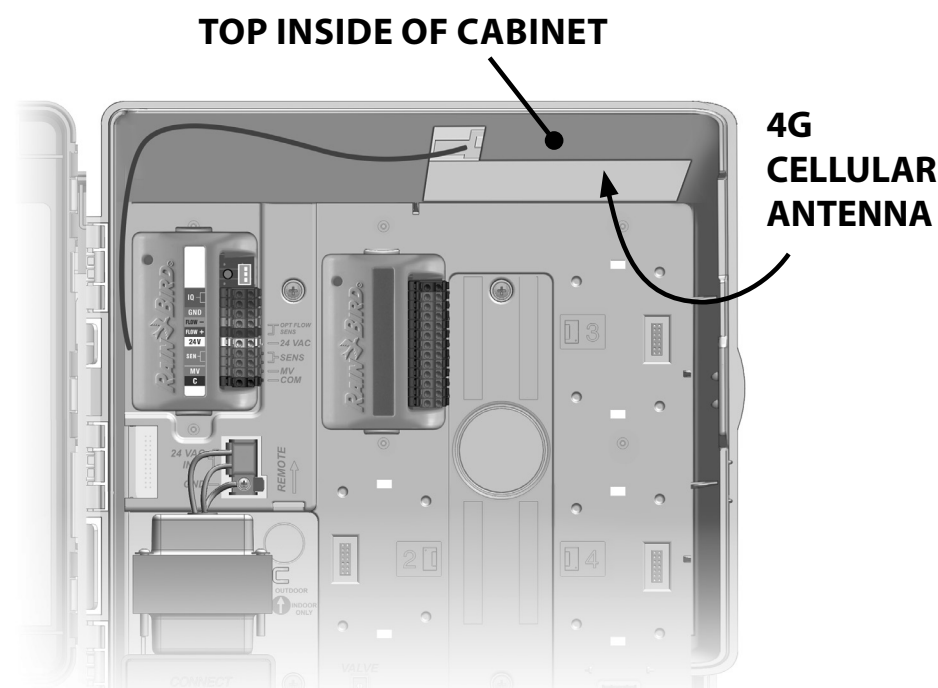

### 2 Cellular Antenna Connection

- External cellular antenna required for metal cabinets

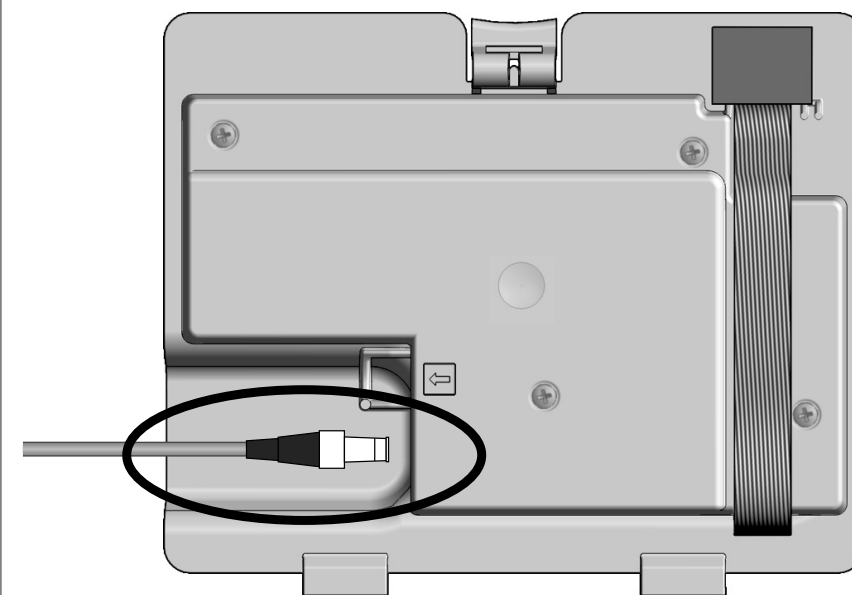


### 3 Configure Cartridge

- See User-manual for Server/Client Configurations

**For LXD and LXME:**


- Turn the controller dial to ETM/IQ Settings.

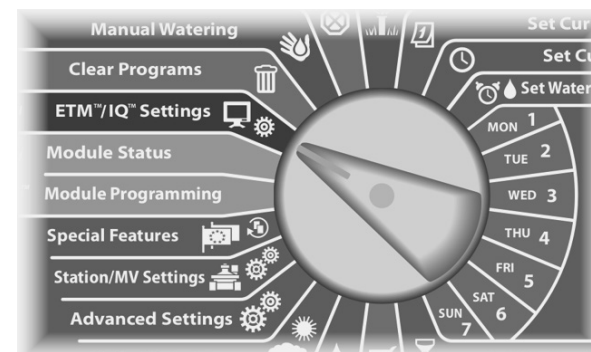


**For LX-IVM:**

- Turn the controller dial to Advanced Settings and choose Configure Cartridge.

- The IQ Settings main menu is displayed. Use the UP or DOWN arrows to select Setup Wizard; press Next.

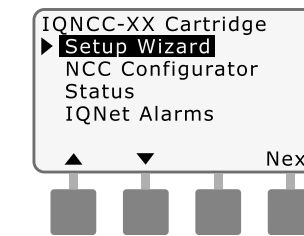


- The Setup - Satellite Type screen is displayed. Use + or - to select Direct; press Next.

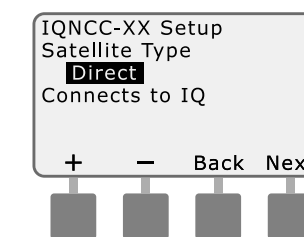


### 4 Verify Cellular Connections

- IQ port status should be IDLE

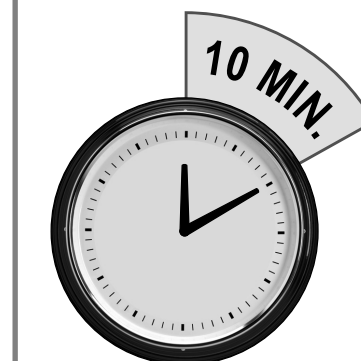


**NOTE:**  
Cellular connection may take 10 minutes or more.


- The IQ Settings main menu is displayed. Use the UP or DOWN arrows to select Status; press Next.

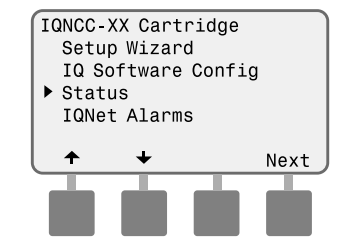

- The Satellite Status screen is displayed. Current status of IQ, Radio and CM ports are shown.

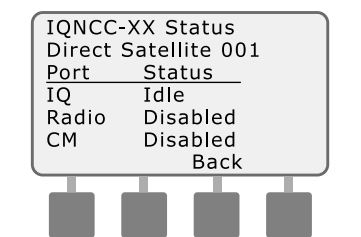


### 5 Get IP Address from the Sticker on the Back of the Cartridge

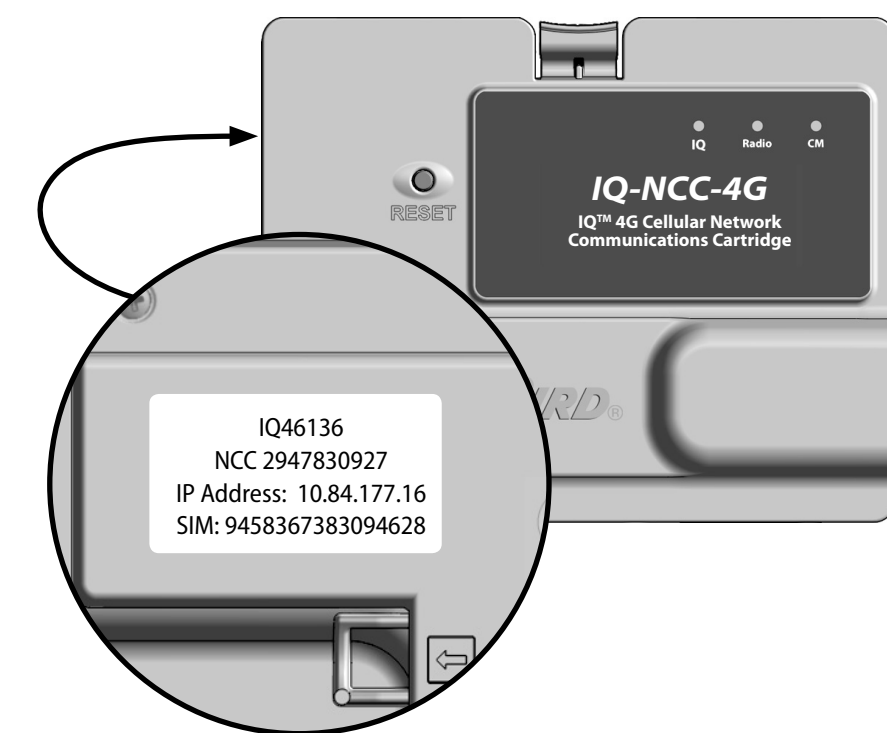


### 6 Go to IQ4.RAINBIRD.COM

- Enter User Name & Password to Logon to IQ4.

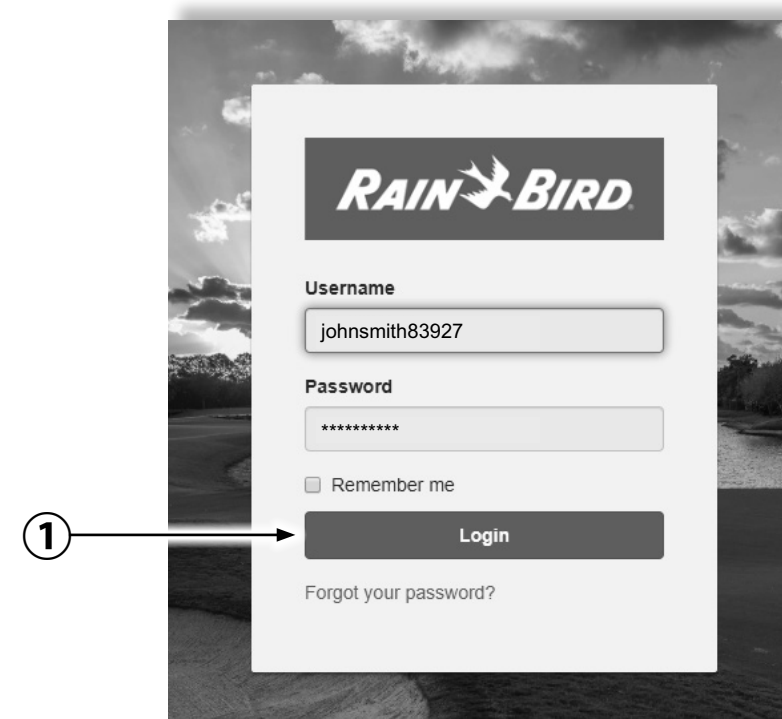



### 7 Add Site

- Click Orange + button.
- Enter Site Name.
- Enter Description (optional).
- Click SAVE.

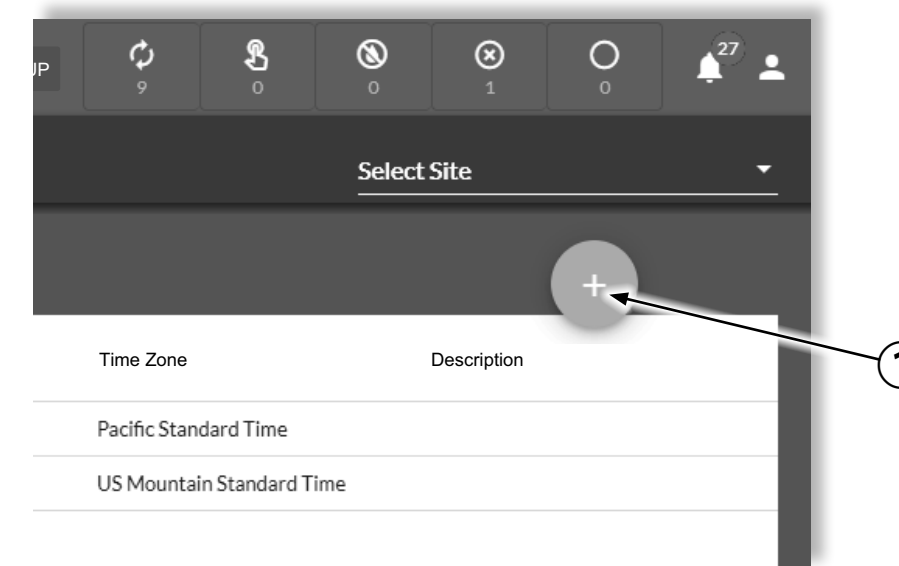


### 8 Add Satellite

- Choose the CONTROLLERS Tab.
- Click Orange + button.
- Select ESP-LX Controller Type.

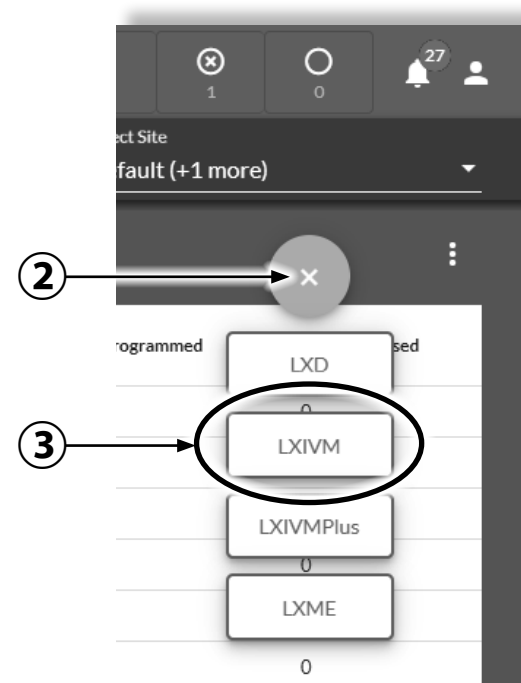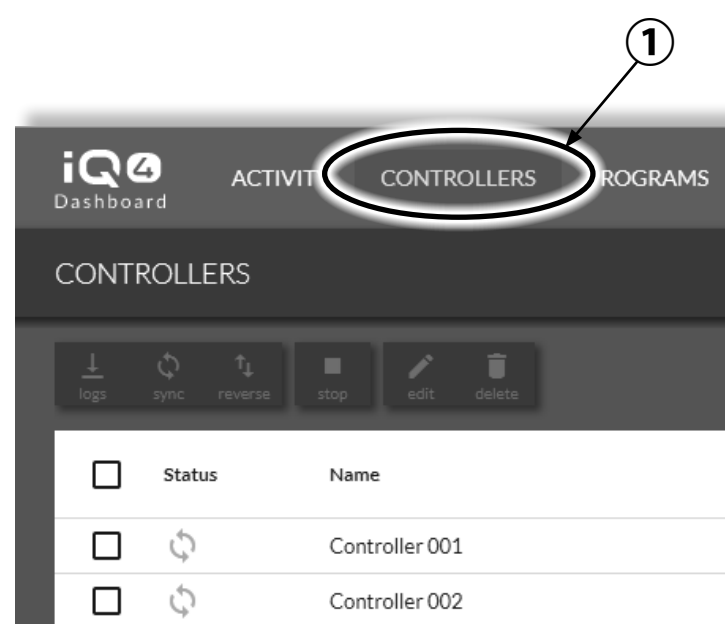

### 9 Select Configuration and Stations

- Select Site.
- Select IQNet Type.
- Select IP Connection Type.
- Enter IP Address from cartridge sticker.
- Click SAVE.

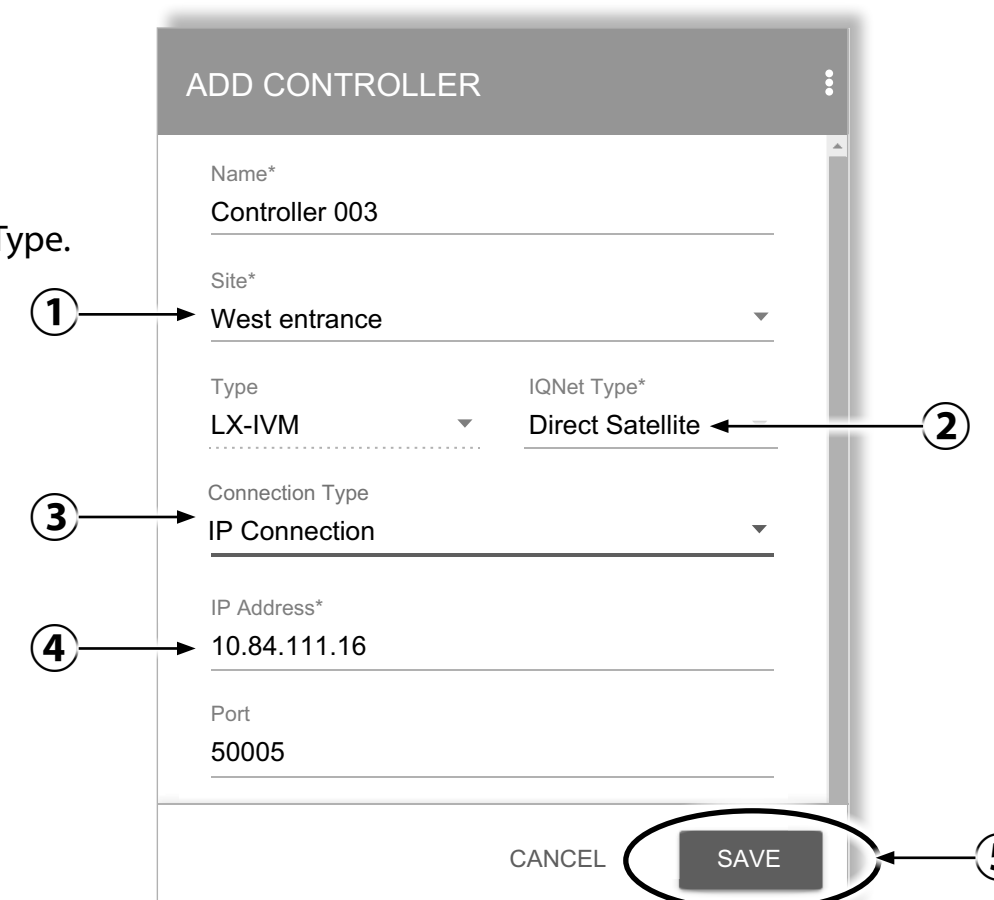

### 10 Reverse Sync Data from Controller

- Select which Controller to Reverse Sync.
- Click the Reverse button.

