


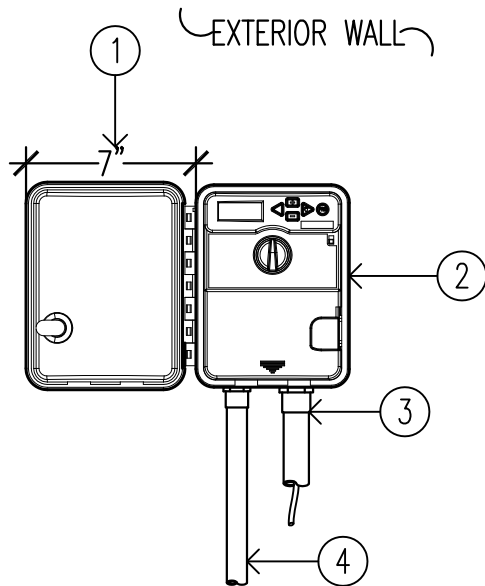

① MINIMUM CLEARANCE
FOR DOOR OPENING


② MODEL X-CORE-X00

③ CONTROL WIRE IN ELECTRICAL
CONDUIT. SIZE AND TYPE
PER LOCAL CODE

④ ELECTRICAL SUPPLY CONDUIT.
CONNECT TO POWER SOURCE.
J BOX INSIDE CONTROLLER.

NOTE

SPECIFY 4, 6 OR 8 STATION MODEL CONTROLLER. MOUNT CONTROLLER WITH LCD SCREEN AT EYE LEVEL. CONTROLLER SHALL BE HARD-WIRED TO GROUNDED 110 VAC SOURCE.

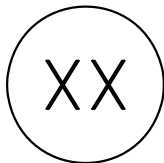

X-CORE CONTROLLER

SCALE: 1.5" = 1'-0" **Hunter** IRRIGATION DETAIL