



- NOTES:**
1. SEE CURLEY® SLOPE APPLICATION DETAIL SHEET FOR PROPER SLOPE INSTALLATION.
 2. STAPLE PATTERNS ARE DEPENDENT ON SITE CONDITIONS. SEE CURLEY® STAPLE PATTERN GUIDE FOR DETAILS.
 3. E-STAPLE® MAY BE USED IN PLACE OF WIRE STAPLES.

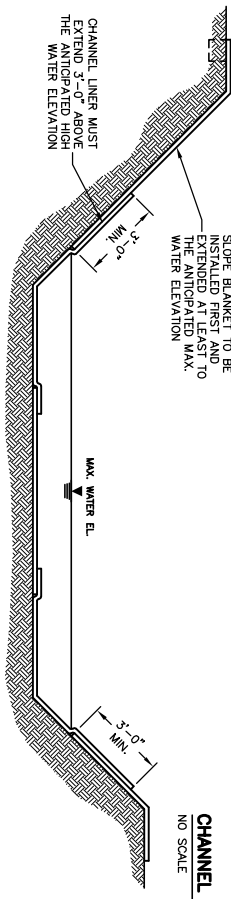


CHANNEL INSTALLATION METHOD "A"
NO SCALE

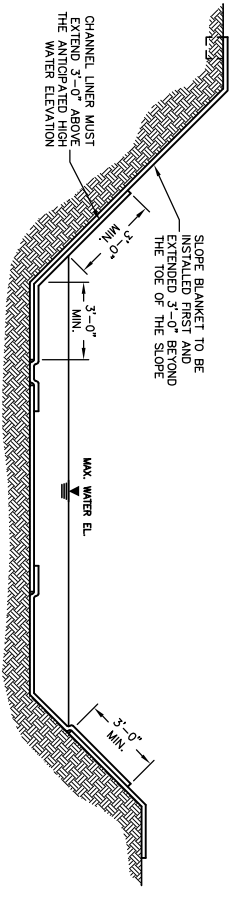


CHANNEL INSTALLATION METHOD "B"
NO SCALE


CHANNEL DETAIL
NO SCALE

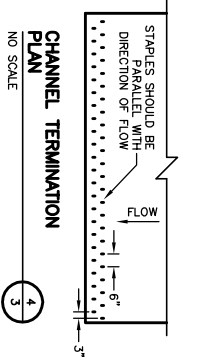


CHANNEL TERMINATION PLAN
NO SCALE

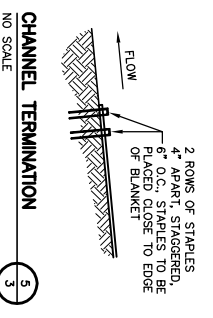


CHANNEL TERMINATION
NO SCALE

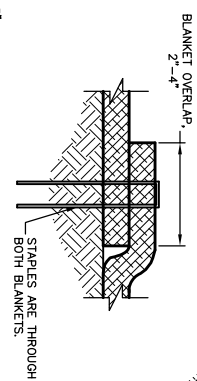


SIDE SEAM OVERLAP STAPLE DETAIL
NO SCALE

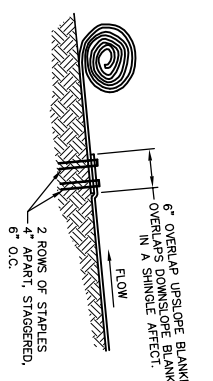


CHANNEL BLANKET END OF ROLL OVERLAP
NO SCALE

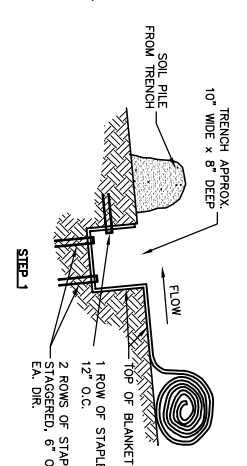


STEP 1

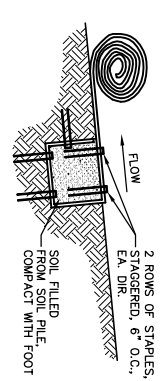

STEP 2

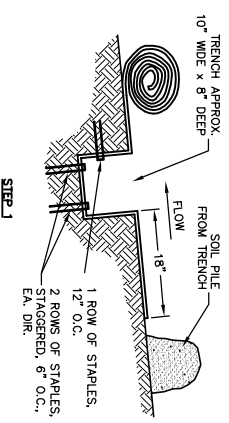

STEP 1

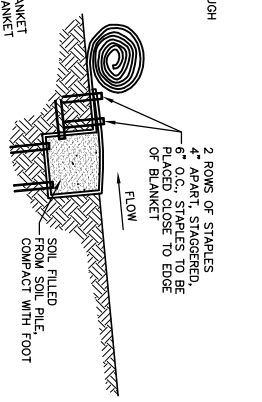

STEP 2

CHANNEL TRENCHING METHOD "A"
NO SCALE

CHANNEL TRENCHING METHOD "B"
NO SCALE

NO. OF REVISIONS	DATE	PROJECT	MANAGER	DATE 1/7/03	SCALE	DRAWN BY
		AMERICAN EXCELSIOR COMPANY	ARLINGTON, TEXAS		NONE	PROJECT NO. 3
						SHEET NO. 3

