

Flo Saddles

The fastest, easiest way to tap into any line



Flo-Tap™

- No interruption of water service
- No need to cut pipe
- Less installation labor
- Less installation space required
- No bolts
- No washers
- No nuts
- No rust

Clamp-It™

- Less installation labor
- Less installation space required
- No bolts
- No washers
- No nuts
- No rust



flo **Control**
Quality Products by NDS

Clamp-It™ Saddles

Easy as 1, 2, 3.



Place the Saddle on a desired location and mark. Remove saddle, drill hole and deburr.




Place saddle over hole and attach easy clamping hinge around pipe.



Apply wedge half way by hand and finish off with a slight tap of a rubber mallet.

No need to shut off the water with

Flo-Tap™ Saddles

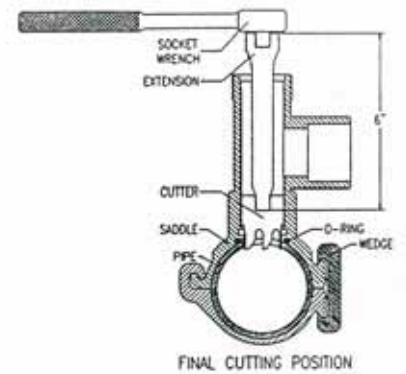

Using a socket wrench with a 6" extension, turn the cutter clockwise to cut an opening in the pipe. It is sealed, so you don't need to shut off the water.



TOLL FREE 800-726-1994
851 N. Harvard Avenue
Lindsay, CA 93247
www.ndspro.com