



GARDEN AND POND LED LIGHTING

For Models:

- Garden and Pond Spotlight 1-Watt (Item #84031)
- Garden and Pond Spotlight 3-Watt (Item #84033)
- Garden and Pond Spotlight 6-Watt (Item #84034)
- Garden and Pond Waterfall & Up Light (Item #84032)



5 YEAR WARRANTY

The Garden and Pond LED Lighting is guaranteed for five years from date of purchase. Proof of purchase required. Warranty does not cover damage resulting from negligent handling, misuse or lack of reasonable maintenance or care. Warranty is valid against defects due to material and workmanship only. The sole obligation shall be to replace the defective unit with a suitable replacement unit. Units should be checked for proper operation prior to returning as defective. No liability for loss or damage of any nature or kind, whether arising out of or from the use of the product, whether defective or not defective, is assumed by AquaScape, Inc. or it's affiliates.

CONTACT US

For more information about our company or products please visit our website at www.aquascapeinc.com or call (US) 1-866-877-6637 (CAN) 1-866-766-3426.

SAFETY/ELECTRICAL WARNINGS




WARNING: It is recommended whenever working in or near water to have all electrical devices plugged into a ground fault interrupter (GFCI) that has been installed by a licensed electrician.

- To reduce the risk of electrical shock or damage to the light, all wiring and junction connections should be made per local codes. Requirements may vary depending on usage and location.
- The power cable should be protected at all times to avoid punctures, cuts, bruises and abrasions.
- Operating the light fixture outside of the 9-15 volt operating range voids the product warranty and may damage or shorten the life of the LED's.

ASSEMBLY (Item #84031, #84033, #84034)



ATTACHING STAND

- Line up orientation arrows on the fixture holder with the arrows on the base.

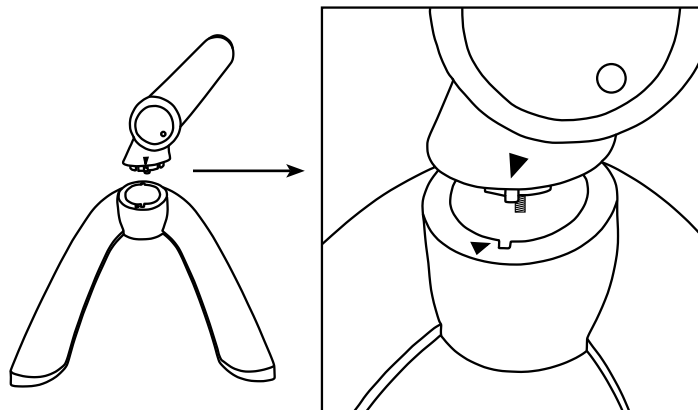

- Turn the fixture holder clockwise until the lamp is facing forward
- The fixture holder can be adjusted to rotate 30 degrees to the left or right.

- **Note: Do not overturn or you may damage the holder and base.**

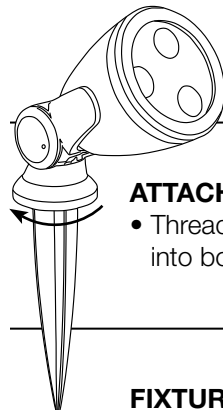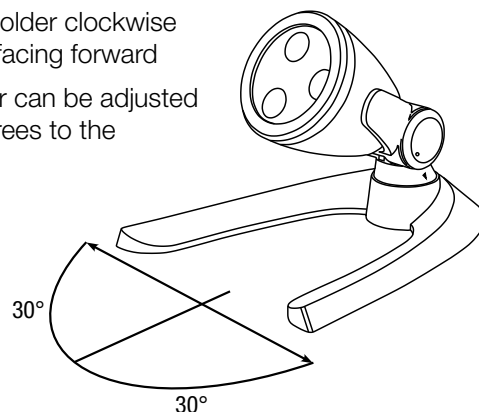


ATTACHING STAKE

- Thread adjustable stake clockwise into bottom of fixture holder.


FIXTURE ONLY

- The light can be used without the holder if desired allowing the fixture to be disguised between the stones in the water feature.

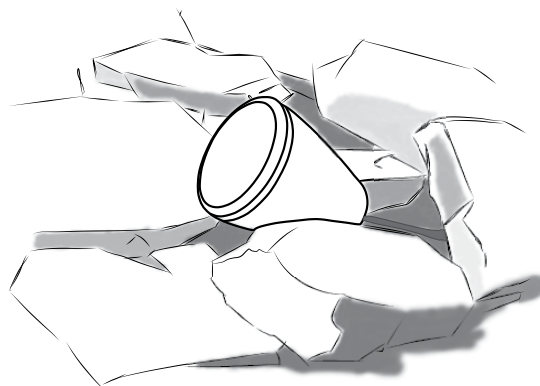

ADJUSTING LIGHT ANGLE


- **1-watt, 3-watt and, 6-watt** – To adjust the angle, push up or down on the light holder until it “clicks” into desired position.

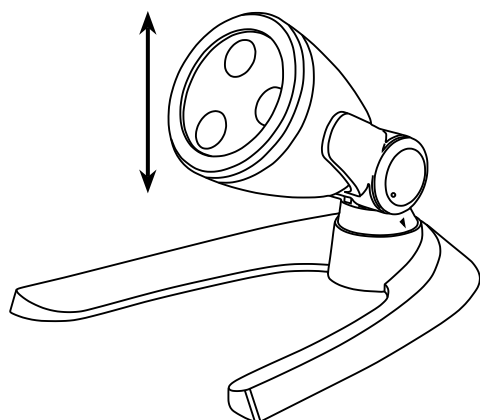

ASSEMBLY (Item #84032)

LIGHT HOLDER

- The light holder provides a stable base to hold the Waterfall & Up Light in place when positioned in moving water or beneath a waterfall. The light can be removed from the base if desired.

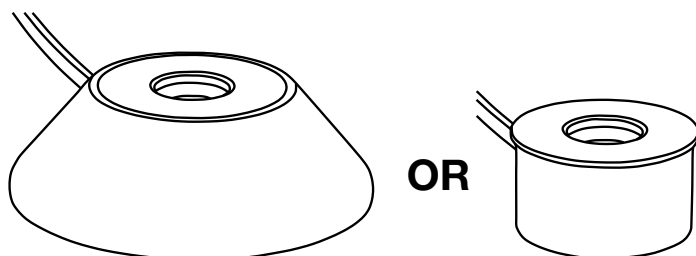


ELECTRICAL CONNECTIONS

- The light fixture is designed to operate on a 12 volt low voltage outdoor-rated transformer. The light has a maximum voltage operating range between 9-15 volts. Operating the fixture outside of this voltage range voids the product warranty and may damage or shorten the life of the LED's.
- It is recommended to locate the transformer as close to the light fixtures as possible in order to avoid voltage drops caused by long electrical cable runs.
- For your convenience each light includes a 12-volt Quick-Connect at the end of the electrical cable providing tool-free electrical connection from the transformer to the light. Additional Quick-Connect 12-volt accessories, such as 3-way (item# 98486) and 6-way (item# 94022) splitters, as well as extension cables (item# 98998) are also available to help complete your lighting project.
- The light can also be wired directly into a pre-existing low voltage lighting system. Cut off Quick-Connect and use a commercially available wiring device suitable for outdoor applications per local codes.
- It is recommended to bury low voltage cables 6" or less.



NOTE: Light failure as a result of improper wiring is not covered under warranty.

REPLACEMENT PARTS

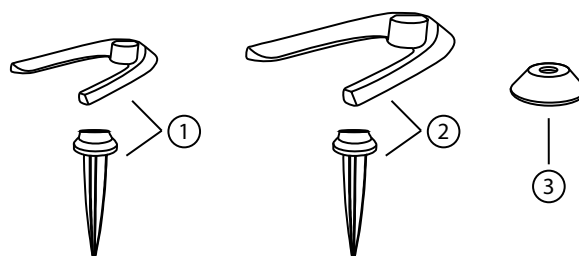

LED LIGHT REPLACEMENT PARTS / KITS	
No.	Item number/description
1.	84035 1-Watt 12V LED Spotlight G2 Replacement Mounting Kit
2.	84036 3/6-Watt 12V LED Light G2 Replacement Mounting Kit
3.	84037 1-Watt LED Waterfall G2 Replacement Base

For more information about our company or products, please visit our website at www.aquascapeinc.com or call us at (US) 1-866-877-6637 (CAN) 1-866-766-3426



GARDEN AND POND LED LIGHTING

Pour les modèles :

- Garden and Pond Spotlight 1-Watt (Références N° 84031)
- Garden and Pond Spotlight 3-Watt (Références N° 84033)
- Garden and Pond Spotlight 6-Watt (Références N° 84034)
- Garden and Pond Waterfall & Up Light (Références N° 84032)



GARANTIE 5 ANS

L'éclairage DEL pour jardin et bassin est garanti cinq ans à compter de la date d'achat. Preuve d'achat exigée. La garantie ne couvre pas les dommages entraînés par une manipulation négligente, une mauvaise utilisation ou un manque d'entretien ou de précaution raisonnable. La garantie est valide contre les vices de fabrication et de matière uniquement.

La seule obligation consistera à remplacer le produit défectueux par un produit de rechange adapté. Le bon fonctionnement des produits doit être vérifié avant de les retourner comme étant défectueux. AquaScape, Inc. ou ses sociétés affiliées ne sauraient être tenues responsables de la perte ou des dommages, de quelque nature qu'ils soient, résultant de l'utilisation du produit, qu'il soit ou non défectueux.

NOUS JOINDRE

Pour de plus amples informations sur notre entreprise ou nos produits, veuillez visiter notre site Web www.aquascapeinc.com, ou appeler le 1-866-877-6637 (É.-U.), 1-866-766-3426 (CAN).

AVERTISSEMENTS CONCERNANT LA SÉCURITÉ ET L'ÉLECTRICITÉ




AVERTISSEMENT : lorsqu'ils sont utilisés dans l'eau ou à proximité, il est recommandé que tous les appareils électriques soient branchés dans une prise à disjoncteur de fuite de terre posée par un électricien agréé.

- Pour réduire le risque d'électrocution ou éviter d'endommager la lampe, toutes les connexions de câblage ou de jonction doivent être effectuées conformément aux codes locaux. Les exigences peuvent varier en fonction de l'utilisation et du lieu.
- Le câble d'alimentation doit être protégé en permanence pour éviter les perforations, coupures, coups et abrasions.
- Le branchement de la lampe hors de la plage de tension 9-15 volts annule la garantie du produit et peut endommager ou raccourcir la durée de vie des DEL.

MONTAGE (Références N° 84031, N° 84033, N° 84034)



ATTACHEMENT DU SOCLE

- Aligner les flèches de direction sur le support de lampe avec les flèches sur le socle.

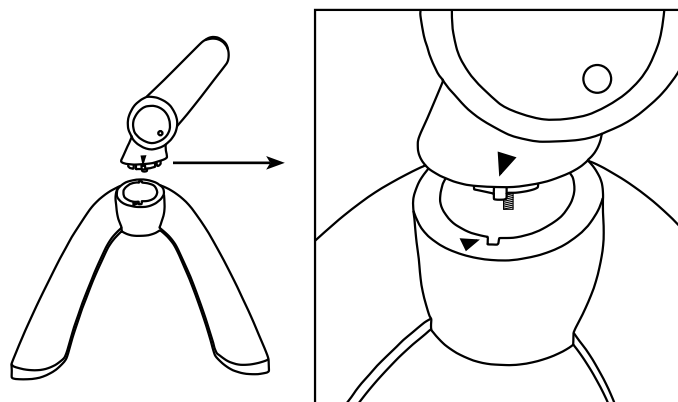

- Tourner le support de lampe dans le sens des aiguilles d'une montre jusqu'à ce que la lampe soit tournée vers l'avant.
- Le support de lampe peut être réglé pour pivoter de 30 degrés vers la gauche ou la droite.

- **Remarque :** ne pas faire pivoter au-delà, vous pourriez endommager le support et le socle.

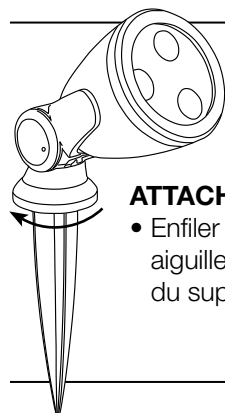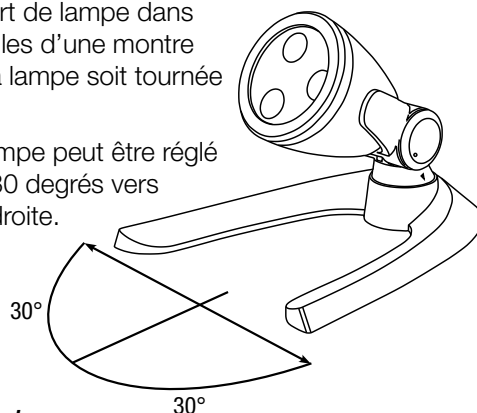


ATTACHEMENT DU PIQUET

- Enfiler le piquet réglable dans le sens des aiguilles d'une montre dans la partie inférieure du support de lampe.


LAMPE UNIQUEMENT

- Au besoin, la lampe peut être utilisée sans le support pour lui permettre de se camoufler entre les pierres du dispositif aquatique.

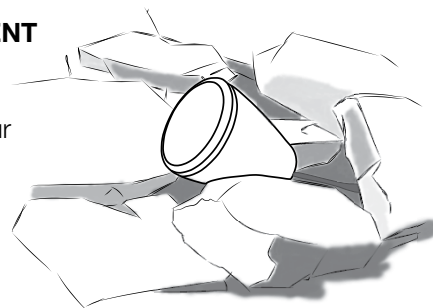

RÉGLAGE DE L'ANGLE D'ÉCLAIRAGE

- **1 watt, 3 watts et 6 watts** – Pour régler l'angle, pousser vers le haut ou vers le bas le support de lampe jusqu'à ce qu'il « clique » en s'enclenchant dans la position voulue.

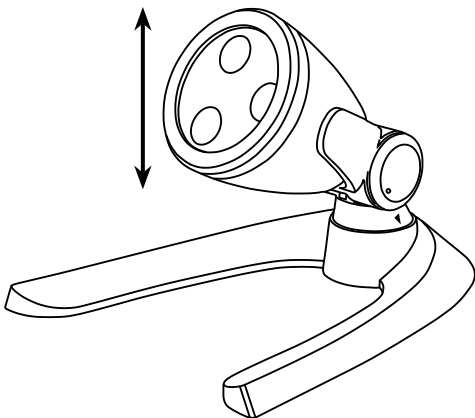

MONTAGE (RÉFÉRENCE N° 84032)


SUPPORT DE LAMPE

- Le support de lampe offre un socle stable pour maintenir en place une lampe de chute d'eau qui est placée dans de l'eau en mouvement ou en-dessous d'une chute d'eau. Au besoin, la lampe peut être retirée de son socle.



REMARQUE : les défaillances de lampe causées par un câblage inapproprié ne sont pas couvertes par la garantie.

PIÈCES DE RECHANGE

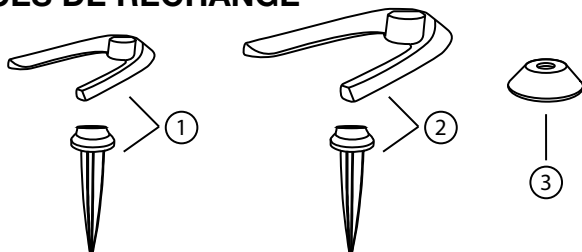

PIÈCES / NÉCESSAIRES DE RECHANGE DE LAMPE DEL

N°	Référence/description
1.	84035 Nécessaire de rechange G2 pour projecteur DEL 12 V, 1 W
2.	84036 Nécessaire de rechange G2 pour projecteur DEL 12 V, 3/6 W
3.	84037 Socle de rechange G2 chute d'eau pour DEL 1 W

Pour plus de renseignements au sujet de notre société ou de nos produits, veuillez visiter notre site Web au www.aquascapeinc.com ou téléphonez sans frais au 1 866 766 3426, au Canada, ou au 1 866 877 6637, aux États-Unis.