

# ES-250 SHRED 'N' VAC®

# Operator's Manual

# **WARNING**



### **Burn Hazard**

The muffler or catalytic muffler and surrounding cover may become extremely hot.



Always keep clear of exhaust and muffler area, otherwise serious personal injury may occur.

# **WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

# **WARNING**



Users of this equipment risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. ECHO provides an operator's manual. It must be read and understood for proper and safe operation. Failure to do so could result in serious injury.

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.

X7501186101

# **TABLE OF CONTENTS**

Table of Contents	2
Introduction	
The Operator's Manual	3
Servicing Information	3
Parts/Serial Number	3
Service	
Echo Consumer Product Support	
Product Registration	
Additional or Replacement Manuals	4
Safety	
Manual Safety Symbols and Important Information	
International Symbols	
Personal Condition and Safety Equipment	6
Equipment	
Emission Control (Exhaust & Evaporative)	
CARB And EPA Emissions Control Information	
Description	
Contents	
Assembly	
Blower Application	
Install Blower Pipes	
Remove Blower Pipes	
Vacuum/Shredding Application	
Operation	
Fuel	
Starting Cold Engine	
Starting Warm Engine	
Stopping Engine	
Operating Blower	
SHRED 'N' VAC® Operation	
SHRED 'N' VAC® Troubleshooting	
Maintenance	
Skill Levels	
Maintenance Intervals	27
Air Filter	
Fuel Filter	
Spark Plug	29
Cooling System	30
Exhaust System	
Carburetor Adjustment	32
Shredder Blade	
Debris Bag	
Troubleshooting	
Storage	
Long Term Storage (Over 30 Days)	
==::0 :3: 0:0: (0:0: 00 = 0,0)	٠.

# **ES-250**

# **TABLE OF CONTENTS**

Specifications	. 38
Notes	
Product Registration	. 40
Notes	

# INTRODUCTION

Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-job dependability. Read and understand this manual. You will find it easy to use and full of helpful operating tips and SAFETY messages.


# The Operator's Manual

Keep it in a safe place for future reference. Contains specifications and information for safety, operation, maintenance, storage and assembly specific to this product. Scan QR codes throughout the operator's manual for more information.

# SERVICING INFORMATION

### Parts/Serial Number

Genuine ECHO Parts and ECHO REPOWER™ Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts always have the Model Number and Serial Number of the unit with you. You can find these numbers on the engine housing. For future reference, write them in the space provided below.

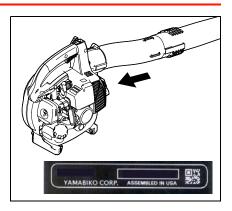

Model No.	SN.	

### Service

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

# **Echo Consumer Product Support**

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.



ES-250 SAFETY

# **Product Registration**

To ensure trouble free warranty coverage it is important that you register your ECHO equipment on-line at <a href="https://www.echo-usa.com">www.echo-usa.com</a> or by filling out the product registration sheet included in this manual. Registering your product confirms your warranty coverage and provides a direct link between you and ECHO if we find it necessary to contact you.

# **Additional or Replacement Manuals**

Replacement Operator, Safety Manuals, and Parts Catalogs are available from your ECHO dealer or at www.echo-usa.com or by contacting ECHO Inc., 400 Oakwood Road, Lake Zurich, IL 60047 (800-673-1558). Always check the ECHO Web Site for updated information.



**Safety Videos** are available from your Echo dealer. A \$5.00 shipping charge will be required for each video.

### SAFETY

# **Manual Safety Symbols and Important Information**

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

# **▲** DANGER

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

# **WARNING**

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

# **A** CAUTION

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which may lead to minor or moderate personal injury if not avoided.



# NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

# **International Symbols**

Symbol	Description	Symbol	Description
<b>%</b>	Warning, See Operator's Manual	Н	Carburetor Adjustment - High Speed Mixture
	Wear Eye, Ear and Head Protection	T	Carburetor Adjustment - Idle Speed
	Wear Hand Protection	L	Carburetor Adjustment - Low Speed Mixture
$\triangle$	Safety/Alert	STOP	Emergency Stop
ումիակա.	Hot Surface	<u>+</u>	Fuel and Oil Mixture
-	Idle speed	*	Fast speed
	Finger severing	<b>H</b> ■	Primer Bulb
<b>(A)</b>	DO NOT Allow Flames or Sparks Near Fuel	Ignition ON OFF	Ignition ON / OFF
9	DO NOT Smoke Near Fuel	-	Choke Control "COLD START" Position (Choke Closed)

Symbol	Description	Symbol	Description
+	Choke Control "RUN" Position (Choke Open)	علا	Wear slip resistant footwear
15m (50ft)		Keep Bystanders and Helpers Away 15 m (50 ft.).	



# **Personal Condition and Safety Equipment**

# **WARNING**

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

### **Physical Condition**

Your judgment and physical dexterity may not be good:

- If you are tired or sick.
- If you are taking medication.
- If you have taken alcohol or drugs.

Operate unit only if you are physically and mentally well.



SAFETY ES-250

### **Eye Protection**

# **WARNING**

- ◆ Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- ◆ For additional safety, a full-face shield may be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

### **Hand Protection**

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

### **Hearing/Ear Protection**

ECHO recommends wearing hearing protection whenever unit is used.

### **Breathing Protection**

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

# **Proper Clothing**

Wear snug-fitting, durable clothing:

- · Pants should have long legs, shirts should have long sleeves.
- DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.

Wear sturdy work shoes with nonskid rubber soles:

- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT BAREFOOTED.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.



# **WARNING**

The components of this machine generate an electromagnetic field during operation, which may interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

**Extended Operation / Extreme Conditions** 

# **A** CAUTION

Prolonged exposure to cold and/or vibration may result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions may result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

*IIIEGHO.* 

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.



SAFETY ES-250

# Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.



To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercise to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

# **A** DANGER

All over head electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death may result.

# DANGER

Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

ES-250 SAFETY

### Read the Manual

 Provide all users of this equipment with the Operator's Manual for instructions on Safe Operation.

### Clear the Work Area

- Clear the area of children, bystanders, and pets. At a minimum, keep all
  children, bystanders, and pets outside a 15 m (50 ft) radius; outside the 15 m
  (50 ft) zone, there is still a risk of injury from thrown objects. Bystanders
  should be encouraged to wear eye protection. If you are approached, stop the
  engine.
- Avoid blowing debris towards people, pets, open windows, or vehicles when using unit.
- Review area to be cleared. Look for potential hazards such as stones or metal objects.

### Keep a Firm Grip

• Hold the handle in one hand, with thumb and fingers encircling the handle.

### Keep a Solid Stance

 Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

### **Avoid Hot Surfaces**

 Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



# **Equipment**

# WARNING

Use only ECHO attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO, INC. will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual.

- Check unit for loose/missing nuts, bolts, and screws. Tighten and/or replace as needed.
- · Do not use blower if any part is missing or damaged.
- Have repairs done only by an authorized ECHO Service dealer.



# **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ◆ ALWAYS stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- ◆ DO NOT start or operate unit unless all guards and protective covers are properly assembled to unit.
- NEVER reach into any opening while the engine is running.
   Moving parts may not be visible through openings.

# **WARNING**

Periodically Check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an authorized servicing dealer before using.

# **EMISSION CONTROL (EXHAUST & EVAPORATIVE)**

### CARB And EPA Emissions Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/ fuel line emission control system is

EMISSION CONTROL INFORMATION ENGINE FAMILY: EIEHXS.0214EQ DISPLACEMENT: 21.2cc EMISSION CONPLIANCE PERIOD: 50Hours THIS ENGINE MEETS 2013 U.S.EPA EXH/EVP & CALIFORNIA EXHVEVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY

EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks.

An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

# **Product Emission Durability** (Emission Compliance Period)

### EMISSION CONTROL INFORMATION

ENGINE FAMILY: CEHXS.0214KL DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 300Hours THIS ENGINE, MEETS 2012 U.S. EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.


YAMABIKO CORP. MMM/YYYY [F]



The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

# DESCRIPTION

Locate the safety decal(s) on your unit. Make sure the decal(s) is legible and that you understand and follow the instructions on it. If a decal cannot be read, a new one can be ordered from your ECHO dealer.

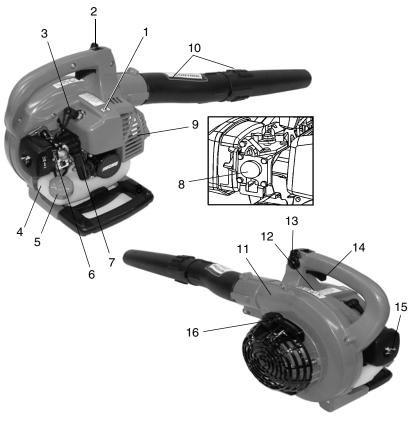

**Hot Decal** 





**Sound Label** 



**Suction Tube Warning Label** 



- 1. **SAFETY DECAL** Lists important safety precautions.
- 2. **STOP SWITCH** "SLIDE SWITCH" mounted on top of throttle handle. Push forward to start and run. Slide back to stop.
- 3. **SPARK PLUG** Provides spark to ignite fuel mixture.
- 4. FUEL TANK Contains fuel and fuel filter.
- FUEL TANK CAP Covers and seals fuel tank.
- 6. **CHOKE** The choke control lever is located on the front of the air cleaner case. Move choke lever to COLD START ( | → | ) to close the choke for Cold Starting. Move choke lever to RUN ( | ↓ | ) position to open choke.
- RECOIL STARTER HANDLE Pull recoil handle slowly until recoil starter engages, then quickly and firmly. When engine starts, return handle slowly. DO NOT let handle snap back or damage to unit will occur.
- 8. **PURGE BULB** Pumping purge bulb before starting engine draws fresh fuel from the fuel tank, purging air from the carburetor. Pump purge bulb until fuel is visible and flows freely in the clear fuel tank return line. Pump purge bulb an additional 4 or 5 times.
- SPARK ARRESTOR MUFFLER OR SPARK ARRESTOR MUFFLER
  WITH CATALYST -The muffler controls exhaust noise and emission. The
  spark arrestor screen prevents hot, glowing particles of carbon from
  leaving the muffler. Keep exhaust area clear of flammable debris.
- 10. BLOWER PIPES Exclusive positive locking system.
- 11. **SOUND LABEL** Lists important safety precautions.
- 12. SAFETY DECAL Lists important safety precautions.
- 13. **THROTTLE POSITION LEVER** Pull back to increase engine speed. Friction washers maintain throttle lever setting.
- 14. **THROTTLE TRIGGER** Spring loaded to return to idle when released. During acceleration, press trigger gradually for best operating technique.
- 15. AIR CLEANER Contains replaceable air filter element.
- FAN/SHREDDER BLADE COVER Covers blade area and activates safety interlock switch when closed. Engine will not run if safety switch is not activated.

CONTENTS ES-250


# **CONTENTS**

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- \_\_\_\_ 1 Power Head
- \_\_\_\_ 1 Blower Pipe (upper)
- \_\_\_\_ 1 Blower Pipe (lower)
- \_\_\_\_ 1 SHRED 'N' VAC<sup>®</sup> Suction
  Tube
- \_\_\_\_ 1 Elbow Pipe
- \_\_\_\_ 1 Debris Bag
- \_\_\_\_ 1 Operator's Manual
- \_\_\_\_ 1 Warranty Statement
- \_\_\_\_ 1 Echo Power Blend X <sup>TM</sup>
  2-stroke oil sample



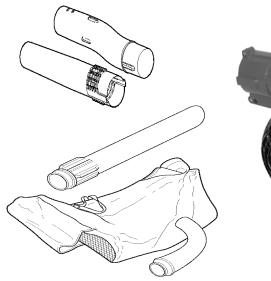



# **ASSEMBLY**

# **Blower Application**


# **WARNING**


Never perform maintenance or assembly procedures with engine running or serious personal injury may result.


# **Install Blower Pipes**

1. Stand unit upright on blower base.

- Align locking ribs (A) on upper blower pipe with recesses (B) in fan case. Assure short locking rib (C) faces downward. Slide upper blower pipe into fan case until a clicking sound is heard.
- Align tabs (D) with grooves (E) and slide lower blower pipe over upper pipe until there is light resistance. Do not force connection.
- Hold upper pipe, and turn lower pipe clockwise, engaging positive locking channels until connection is firm. Do not force connection.

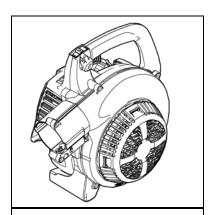

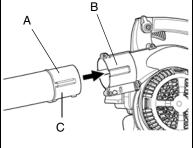

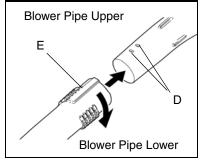


ASSEMBLY ES-250

Note: Blower use will eventually loosen pipe connections. Exclusive positive locking system allows pipes to be tightened. If loosening occurs, remove lower straight pipe, and install according to instructions 3 & 4.

# **Remove Blower Pipes**


 Insert screwdriver (F) into hole located near lock symbol (G) to release pipe lock.

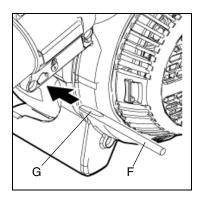

# **A CAUTION**

# Screwdriver tip may stick out opposite side of locking hole.


- 2. Pull pipe out of fan case.
- 3. Remove screwdriver.

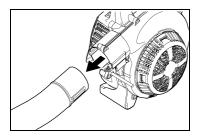

# Vacuum/Shredding Application


### Install Vacuum Tube

 Turn knob (I) counter clockwise until hinged housing cover is free to open for vacuum tube installation.

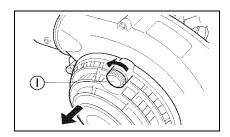


 Opening housing cover, slide recess (J) on vacuum tube into locking rib (K), and turn the vacuum tube clockwise so that it is locked.

Note: Engine will not start/operate unless safety interlock switch (K) is activated by the vacuum tube.

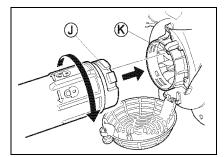


### **Install Bag**

- 1. Stand unit upright on blower base.
- Align locking ribs (A) on elbow pipe with recesses (B) in fan case. Assure short locking rib (C) faces downward. Slide elbow pipe into fan case until a clicking sound is heard.
- 3. Place debris bag opening over flared end of elbow (D), and cinch bag securely with Velcro strap (E).

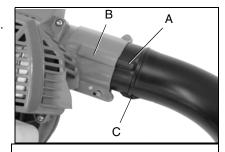



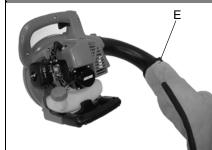

OPERATION ES-250

### **OPERATION**

# **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Blower housing may contain shredder blades and other sharp edges that can cause serious injuries if touched, even if engine is off and blades are not moving. Wear gloves to protect hands from sharp edges and hot surfaces.

# WARNING

Operation of this equipment may create sparks that can start fires around dry vegitation. This unit is equipped with a spark arrestor to prevent discharge of hot particles from the engine. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

### **Fuel**

# WARNING

Diesel fuels and alternative fuels, such as E-15 (15% ethanol), E-85 (85% ethanol) or any fuels not meeting ECHO requirements are NOT approved for use in ECHO 2-stroke gasoline engines. Use of diesel or alternative fuels may cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels may also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

### **Fuel Requirements**

Gasoline - Use 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is **NOT** approved. ECHO brand Power Fuel<sup>™</sup> is 93 octane, ethanol-free fuel premixed with ECHO Red Armor<sup>®</sup> engine oil at 50:1 ratio. Use of ECHO Power Fuel is recommended to extend engine life in all air-cooled 2-stroke and 2/4-stroke hybrid engines.



Two Stroke Oil - A two-stroke engine oil meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. <u>FD</u> Standards must be used. Echo brand premium Power Blend X<sup>™</sup> Universal 2-Stroke Oil meets these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-<u>FD</u> certified oil, such as Echo premium Power Blend X<sup>™</sup>, will void the two-stroke engine warranty.

# NOTICE

Echo premium Power Blend  $X^{TM}$  Universal 2-Stroke Oil may be mixed at 50:1 ratio for application in all Echo engines sold in the past regardless of ratio specified in those manuals.

### **Handling Fuel**

# A DANGER

Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use an approved fuel container.
- ◆ DO NOT smoke near fuel.
- ◆ DO NOT allow flames or sparks near fuel.
- ◆ Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- ◆ NEVER refuel a unit when the engine is HOT or RUNNING!
- ◆ DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- DO NOT overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- ◆ Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- ◆ Move at least 3 m (10 ft.) from refueling location before starting the engine.

# Mixing Instructions

- Fill an approved fuel container with half of the required amount of gasoline.
- Add the proper amount of 2-stroke oil to gasoline.
- 3. Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and remix.

Fuel to Oil Mix – 50:1 Ratio			
US		Metric	
Gas	Oil	Gas	Oil
Gallons	Oz.	Liter	CC.
1	2.6	5	100
2	5.2	10	200
5	13	25	500

# NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

### After use

DO NOT store a unit with fuel in its tank. Leaks can occur.
 Return unused fuel to an approved fuel storage container.

**Storage** - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.



# NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

# NOTICE

Stored two-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.

# **Starting Cold Engine**

1. Stop Switch

Move stop switch (A) away from the STOP position.

Note: Engine will not run if safety switch is not activated.

2. Throttle Position Lever


Move throttle position lever (B) midway between idle and full throttle positions.


3. Choke

Move choke (C) to COLD START ( ) (closed) position.

4. Purge Bulb

Pump purge bulb (D) until fuel is visible and flows freely in the clear fuel tank return line.

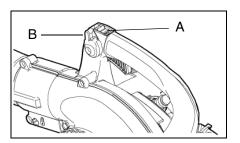

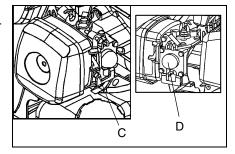

# NOTICE


Recoil starter: Use short pulls - only 1/2 ~ 2/3 of rope for starting. Do not allow the rope to snap back in. Always hold the unit firmly.

### 5. Recoil Starter

Place the unit on a flat, clear area. Firmly grasp throttle handle with left hand and rapidly pull recoil starter handle/rope (E) until engine fires, or maximum 5 pulls.

### 6. Choke

Move choke lever (C) to RUN position, and if necessary, restart engine.

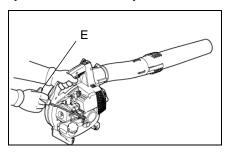

Note: If engine does not start with choke in RUN position after 5 pulls, repeat instructions 3 - 6.

### 7. Throttle Trigger

After engine warm up, gradually depress throttle trigger to increase engine RPM to operating speed.

Note: Allow engine to warm up 3 minutes before use.

# **Starting Warm Engine**

The starting procedure is the same as Cold Start except DO NOT close the choke.

### 1. Stop Switch


Move stop switch (A) away from the STOP position.

### Throttle Position Lever

Move throttle position lever (B) midway between idle and full throttle positions.

### Purge Bulb


Pump purge bulb (D) until fuel is visible and flows freely in the clear fuel tank return line.

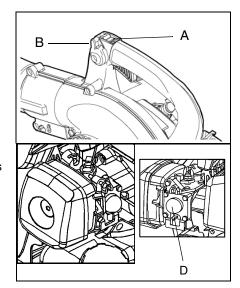

OPERATION ES-250

### 4. Recoil Starter

Place the unit on a flat, clear area. Firmly grasp throttle handle with left hand and rapidly pull recoil starter handle/rope (E) until engine fires.

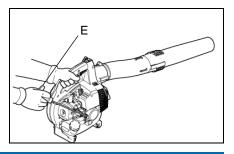

# NOTICE


Recoil starter: Use short pulls - only 1/2 ~ 2/3 of rope for starting. Do not allow the rope to snap back in. Always hold the unit firmly.

Note: If engine does not start after 5 pulls, use Cold Start Procedure.

# **Stopping Engine**

 Throttle Trigger/Throttle Position Lever

Release throttle trigger (F). Move throttle position lever (B) forward to idle position and allow engine to return to idle before shutting off engine.

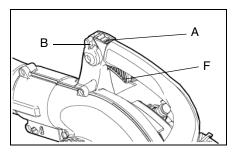

2. Stop Switch

Move stop switch (A) to STOP position.

# WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your ECHO dealer repair stop switch before using unit again.


# Operating Blower

# **WARNING**

Engine exhaust IS HOT, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. ALWAYS position unit so that exhaust is directed away from your face and body.


# **WARNING**

Always wear safety glasses, hearing protection and a face filter mask or serious personal injury may result. Do not point the blower pipe in the direction of people or pets.

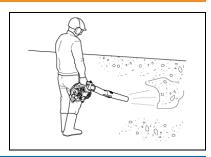

# NOTICE

Use reduced speed only when performing light-duty tasks or to comply with local noise regulations. Continuous low speed operation may allow fuel/oil residue to build-up on the piston and cause rapid build-up of carbon on the spark arrestor screen, resulting in overheating and engine damage. To reduce harmful build-up, run engine at wide open throttle for at least 5 minutes every hour, and

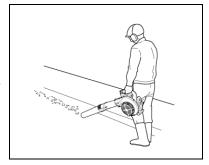

inspect/clean the spark arrestor screen after approximately 40 hours of operation.

Read the Safety Section carefully.

# NOTICE

To avoid engine damage due to over-revving, do not block blower pipe.

- Use only during appropriate hours.
- Allow the engine to warm up at a fast idle for a few minutes.
- Control engine speed with throttle trigger (F), or for continuous use, set engine speed with throttle position lever (B). Rotate throttle position lever forward for lower speed, back for higher speed.



- 4. Use lower speed to blow debris from hard surfaces.
- Additional speed may be necessary to clean debris, snow, etc. from lawns and flowerbeds.

Note: Never use a higher speed setting than necessary to perform a task.

Remember, the higher the

engine speed, the louder the blower noise. Minimize dust by using blower at lower speeds. Keep debris on your property. Be Smart - be a good neighbor.



# **WARNING**

Flying debris hazard. Never operate unit as a vacuum unless discharge elbow is installed and debris bag is securely cinched to elbow. Failure to follow instructions can result in serious injuries.

# **WARNING**

Debris bag is flammable and could be ignited if allowed to contact hot muffler cover or exhaust. Keep bag away from hot surfaces at all times.

- Adjust debris bag strap to support bag on operator's shoulder. Bag must not be folded at intake area, or intake will clog. Further adjustment may be necessary as the debris bag fills and becomes heavier.
- Grip throttle control handle with left hand, and lower handle/stand with right hand.
- Operate unit with beveled end of tube facing downward. Keep tube opening close to material being vacuumed for best results.
- 4. Empty bag when debris level reaches intake opening. To empty bag, move stop switch to "STOP" position, and wait for blower to stop running. Loosen Velcro strap at elbow and slide bag off elbow. Open

other end of bag, and empty contents. Close bag, and reattach to blower. Secure bag with Velcro strap.



Note: Vacuum action works best at higher engine speeds. Avoid using vacuum in areas where rocks or other large, hard debris may be vacuumed into unit. Clear these areas with blower first, blowing light debris into a pile. Use attachment to vacuum pile.

# SHRED 'N' VAC® Troubleshooting

Problem	Cause	Remedy
Unit runs, but doesn't vacuum or has poor suction	Elbow or debris bag clogged	Check elbow and debris bag, and clear as needed. Make sure bag is not folded over at intake during use.
Suction	Obstructions in vacuum tube	Check vacuum tube, and remove obstructions. Avoid wet leaves.
Unit stopped suddenly during vacuuming, and now starter won't work	Object stuck in fan housing area	Remove vacuum tube and check fan area. Remove object.
Unit jams repeatedly during use	Material being vacuumed too big or too hard for blades to shred	Use vacuum for leaves and small twigs, maximum 1/4" diameter x 3" long
Vacuum tube difficult to install or remove from unit	Tube/housing fit tight.	Apply small amount of soapy water to end of tube to ease assembly or removal. Turn tube 1/4 turn to loosen for removal.

# **MAINTENANCE**

# **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow unit to cool before performing service. Wear gloves to protect hands from sharp edges and hot surfaces.

Your ECHO unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the ECHO Dealer do it, each maintenance task has been graded. If the task is not listed, see your ECHO Dealer for repairs.

# **Skill Levels**

**Level 1** = Easy to do. Common tools may be required.

**Level 2** = Moderate difficulty. Some specialized tools may be required.

ECHO offers **REPOWER<sup>TM</sup>** Maintenance Kits and Parts to make your maintenance job easier.

### **Maintenance Intervals**

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	REQ'D SKILL LEVEL
Daily or Before Use	•	•
Air Filter	Inspect/Clean*	1
Choke Shutter	Inspect/Clean *	1
Fuel System	Inspect (1)	1
Cooling System	Inspect/Clean	2
Recoil Starter Rope	Inspect/Clean*	1
Screws/Nuts/Bolts	Inspect/Tighten/Replace*	1
Every Refuel		
Fuel System	Inspect (1)	1
3 Months		
Air Filter	Replace*	1
Fuel Filter	Inspect*	1
Fuel Cap Gasket	Inspect*	1
Spark Plug	Inspect/Clean/Replace*	1
Muffler Spark Arrestor	Inspect/Clean/Replace*	2
Cylinder Exhaust Port	Inspect/Clean/Decarbon	2
Yearly	•	•
Fuel Filter	Inspect/Replace*	1
Fuel Cap Gasket	Replace*	1



**IMPORTANT NOTE** - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

### **MAINTENANCE PROCEDURE NOTES:**

- (1) Low evaporative fuel tanks DO NOT require regular maintenance to maintain emission integrity.
- \* Replacement is recommended based on the finding of damage or wear during inspection

### Air Filter

### Level 1.

Parts Required: REPOWER<sup>TM</sup> AIR & FILTER KIT.

- Close choke (COLD START [-]
   position). This prevents dirt from
   entering the carburetor throat
   when the air filter is removed.
   Brush accumulated dirt from air
   cleaner area.
- 2. Remove air filter cover. Brush dirt from inside cover.
- 3. Remove air filter and lightly brush debris from filter. Replace filter if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.
- 4. If filter can be reused, be certain it:
  - · Fits tightly in he air filter cavity.
  - Is installed with the original side out.
- Install air filter cover.

### **Fuel Filter**


### Level 1.

Parts Required: REPOWER<sup>TM</sup> AIR & FILTER KIT.

# **▲** DANGER

Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.
- 2. Pull the fuel line and filter from the tank.
- 3. Remove the filter from the line and install the new filter.

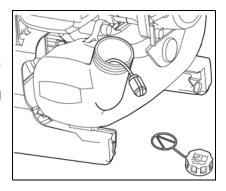

Note: Federal EPA regulations require all model year 2012

and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

# **Spark Plug**

Level 2.

Parts Required: REPOWER<sup>TM</sup> Tune-Up Kit

# NOTICE

Use only NGK BPM-8Y spark plug (BPMR-8Y in Canada) otherwise severe engine damage may occur.


- Remove spark plug and check for fouling, worn and rounded center electrode.
- Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
- 3. Adjust spark plug gap by bending outer electrode.



# **Cooling System**

Level 2.

Parts Required: None if you are careful.

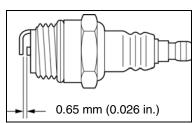

# NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:

- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered "Normal Maintenance." Any failure attributed to lack of maintenance is not warranted.

### Cleaning Grill

 Brush accumulated debris from crankcase intake grill above the fuel tank.

# **Cleaning Cylinder Fins**


- Remove spark plug lead from spark plug, and remove engine cover.
- 2. Clean cylinder fins to allow cooling air to pass freely.
- 3. Reassemble parts in reverse order.


# Exhaust System


# **Spark Arrestor Screen**

Level 2.

Parts Required: Spark Arrestor Screen, Gasket

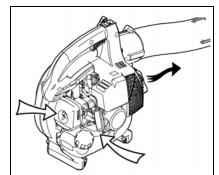

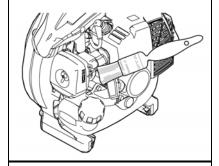

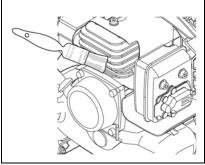


# NOTICE

Carbon deposits in muffler will cause a drop in engine output and overheating. Spark arrestor screen must be checked periodically.

- Remove spark plug lead from spark plug, and remove engine cover.
- Remove spark arrestor cover (A), deflector (B), plate (C), gasket (D), and spark arrestor screen (E) from muffler. Replace screen if plugged with carbon deposits.

Note: When cleaning carbon deposits, be careful not to damage the catalytic element inside muffler.

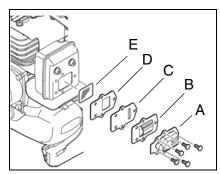


- 3. Clean carbon deposits from muffler components.
- 4. Install spark arrestor screen, gasket, plate, deflector, and cover.
- 5. Loosely reassemble engine cover.
- 6. Tighten all screws securely.
- 7. Attach spark plug lead.

### **Exhaust Port Cleaning**

Level 2.

Parts Required: As needed: Heat Shield


- 1. Remove spark plug lead from spark plug, and remove engine cover.
- Place piston at top dead center.
   Remove muffler (A) and heat shield (B).
- Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port.

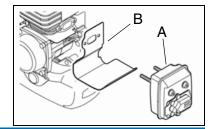

# NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.

- Inspect heat shield, and replace if damaged.
- 5. Install heat shield and muffler.
- Tighten muffler mounting bolts (or nuts) to 70-80 kgf•cm (60-70 in•lbf).
- 7. Loosely reassemble engine cover.
- 8. Tighten all screws securely.
- 9. Attach spark plug lead.
- 10. Start engine, and warm to operating temperature.
- 11. Stop engine, and re-tighten mounting bolts (or nuts) to specifications.

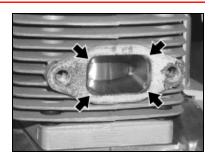

# **Carburetor Adjustment**

### **Engine Break-In**

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

### **High Altitude Operation**

This engine has been factory adjusted to maintain satisfactory starting, emission, and durability performance up to 1,100 feet above sea level (ASL) (96.0 kPa). To maintain proper engine operation and emission compliance above 1,100 feet ASL the carburetor <u>may</u> need to be adjusted by an authorized ECHO service dealer.

# **NOTICE**

If the engine is adjusted for operation above 1,100 feet ASL, the carburetor must be re-adjusted when operating the engine below 1,100 feet ASL, otherwise severe engine damage may result.

### Level 2.

Parts Required: None


Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized ECHO dealer.

Before adjustment make sure that:

- · Air filter is clean and properly installed.
- Spark arrestor screen is free of carbon.



- · Blower pipes are installed.
- Start engine, run at idle for one minute.
- Complete warm up by running at full throttle for 5 minutes, operating choke twice to clear air from carburetor chambers.
- Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on "Specifications" Page of this manual. Turn idle screw (A) clockwise to increase idle speed;

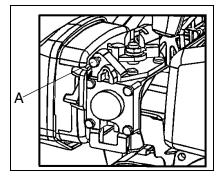

counter clockwise to decrease idle speed.


### Shredder Blade

Level 1.

# **WARNING**

Never remove vacuum tube or open fan guard when SHRED 'N' VAC® is running or serious personal injury may result. Always wear heavy-duty work gloves when working in shredder blade area.

- With engine stopped, remove spark plug wire, remove vacuum tube from unit.
- Remove accumulated debris from blade and inspect for damage.

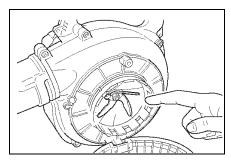

# **NOTICE**

Do not operate SHRED 'N' VAC® if shredder blade is damaged or broken. Return unit to Echo Dealer for service.

Install vacuum tube. Refer to "Install Vacuum Tube and Bag Assembly" in assembly section for correct assembly procedures.

# **Debris Bag**

Level 1.



Shake dust from bag and inspect for hole or tears. Inspect zipper and clean debris from teeth to assure complete closing of zipper.



# **TROUBLESHOOTING**

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
	Fuel at carburetor	No fuel at carburetor	Fuel strainer clogged Fuel line clogged Carburetor	Clean or replace Clean or replace See your Echo dealer
		No fuel at cylinder	Carburetor	See your Echo dealer
Engine cranks -	Fuel at cylinder Muffler wet with fuel	cylinder Muffler wet with fuel Fuel M too rich	Fuel Mixture too rich	OPEN choke Clean/replace air filter See your Echo dealer
starts hard/ doesn't start	Spark at end of plug wire	No spark	Stop switch OFF Electrical prob- lem Interlock switch	Turn switch to ON See your Echo dealer See your Echo dealer
	Spark at plug	No spark	Spark gap incorrect  Covered with carbon Fouled with fuel Plug defective	Adjust to 0.65mm (0.026 in.) Clean or replace Clean or replace Replace plug

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
	Air filter	Air filter dirty	Normal wear	Clean or replace
	Fuel filter	Fuel filter dirty	Contaminants/ residues in fuel	Replace
Engine	Fuel vent	Fuel vent plugged	Contaminants/ residues in fuel	Clean or replace
runs, but dies or	Spark Plug	Plug dirty/ worn	Normal wear	Clean and adjust or replace
does not acceler-	Carburetor	Improper adjustment	Vibration	See your Echo dealer
ate properly	Cooling System	Cooling system dirty/ plugged	Extended operation in dirty/ dusty locations	Clean
	Spark Arrestor Screen	Spark arrestor screen plugged	Normal wear	Replace
Engine does not crank	N/A	N/A	Internal engine problem	See your Echo dealer
Engine runs,		Pipe clogged	Build-up of debris	Unclog
blower doesn't	Blower	Pipe loose	Vibration	Tighten
work or is weak/ uneven	pipe	Pipe damaged	Wear/Misuse	Replace

# **A DANGER**

Fuel vapors are extremely flammable and may cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury may result.

### **STORAGE**

# **WARNING**

During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

# Long Term Storage (Over 30 Days)

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

1. Store unit in a dry, dust free place, out of the reach of children.

# **A** DANGER

Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

- 2. Place the stop switch in the "OFF" position.
- 3. Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- 4. Perform all periodic lubrication and services that are required.
- 5. Tighten all the screws and nuts.
- 6. Drain fuel tank completely. Press purge bulb 6 -7 times to remove remaining fuel from carburetor then drain the tank again. Close choke, start and run the engine until it stops due to lack of fuel.
- Allow engine to cool then remove the spark plug and pour 7 cc (1/4 oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
- 8. Pull the recoil starter handle 2-3 times to distribute the oil inside the engine.
- Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 10. Install the spark plug (do not connect ignition cable).
- 11. Remove blower pipe assembly from unit.



# **SPECIFICATIONS**

MODEL	ES-250
Length	330 mm (13.0 in.) (w/o pipes)
Width	280 mm (11.0 in.)
Height	345 mm (13.6 in.)
Weight (dry)	4.3 kg (9.5 lb.)
Engine Type	Air cooled, two-stroke, single cylinder gasoline engine
Bore	34.0 mm (1.34 in.)
Stroke	28.0 mm (1.1 in.)
Displacement	25.4 cc (1.55 cu. in.)
Exhaust	Spark arrestor muffler or spark arrestor muffler with catalyst
Carburetor	Diaphragm w/purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM-8Y Gap 0.65 mm (0.026 in.)
Fuel	Mixed (Gasoline and Two-stroke Oil)
Fuel/Oil Ratio	50 : 1 Power Blend X <sup>TM</sup> or ECHO Red Armor <sup>®</sup> ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- <u>FD</u> , two-stroke, air-cooled engine oil.
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	Power Blend X <sup>TM</sup> or ECHO Red Armor <sup>®</sup> Premium Universal 2-Stroke Oil
Fuel Tank Capacity	0.47 lit. (15.9 US fl. oz.)
Starter System	Automatic Recoil Starter, centrifugal type
Idle Speed	3,000 RPM
Wide Open Throttle Speed (W.O.T.)	7,100 RPM
Average Air Speed w/pipes (MPH)	61.24 m/sec (137 mph)
Maximum Air Speed w/pipes (MPH)	73.76 m/sec (165 mph)
Air Volume	11.07 m <sup>3</sup> /min. (391 cu. ft./min.)
Sound Level at 50 ft. dB(A) scale per ANSI B175.2	70 dB(A)

ES-250 NOTES

# **NOTES**



# PRODUCT REGISTRATION

### Thank you for choosing ECHO Power Equipment

Please go to <a href="http://www.echo-usa.com/Warranty/Register-Your-ECHO">http://www.echo-usa.com/Warranty/Register-Your-ECHO</a> to register your new product on-line. It's **FAST** and **EASY**! NOTE: your information will never be sold or misused by ECHO, Inc. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Inc., Product Registration, PO Box 1139, Lake Zurich IL 60047.



# PRODUCT REGISTRATION CARD:TARJETA DE REGISTRO:CARTE D'ENREGISTREMENT DU PRODUIT

OPCIO ahorre u producto ductos
ONLINE OPTION: Register online and save a stamp! You will be alerted of product updates and/or be sent new ECHO product information and special offers. Simply go to: www.echo-usa.com

Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.

OPCIÓN POR INTERNET: Registrese en la pagina web y vincer una estampilial. La electraria sobre acualizaziones del nordudo y/o se le envira mitornación sobre los nuevos productos ECHO y las ofertas especíales. Simplemente visile: www.esho-usa.com.

timbre! Vous serez informé sur les nouveaux produits ECHO et les mises à lour de produit ainsi que les offres spéciales. Simplement visitez le: www.echo-usa.com

Confidential: Information provided will not be shared or sold

Purchaser's Name : Nombre del Comprador : Nom de l'acheteur	idor : Nom de l'acl	befeur	Primary use of tool: □Professional □ Homeowner □ Rental Equip. Uso primario de la herramienta:□Professional □ Dueño de casa □ Alquiler Usage principal : □ Professionnel □ Residential □ Location Do vor using to progridic ECHD modurel information and enacial office	
Address : Dirección : Adresse			by 9-mail? — Tyee — DNo  2.Desea usted recibir información periódica y ofertas especiales por correo elec-  2.Desea usted recibir información periódica y ofertas especiales por correo elec-  2.Desea usted recibir información periódica y ofertas especiales por correo elec-  2.Desea usted recibir información periódica y ofertas especiales por correo elec-  2.Desea usteda el producto ECHO? — I vea EN No.  3.Desea usteda el producto ECHO? — Les encoduites  3.Desea usteda el producto ECHO? — Les el producto elec-  3.Desea usteda el producto ECHO? — Les el producto el p	
Oity : Cludad : Ville	State : Estado : Province	Zip Code : Código Postal : Code Postal	ECHO account programmer of the product of the produ	
E-Mail Address : Dirección De Correo Electrónico : Courrier Électronique	Electrónico : Coun	ier Électronique	Visifu usted la pagina web ECHO antes de comprar su producto? ☐ Si ☐ No ☐ No avez-vous visité le site d'ECHO avant de procurer votre produit? ☐ Oui ☐ Non	
Phone Number: Número De Teléfono : Téléphone		Date of Purchase : Fecha de la Compra : Date de l'achat	What factor(s) most influenced your purchase?    Performance	
Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat	donde fue Compr	ado : Lieu d'achat	nfluenció más en su comp D Precio D Experiencia Anterior Marca	
Model Number : Numero del Modelo : No.	, de modéle Serie	Aodel Number : Numero del Modelo : No. de modéle   Serial Number : Numero de Serie : No. de série	cteurs) vous a influencé le	
egistering your purchase enables us to contact you whership in the event of loss. : El registrar su common et aviso de tempo de servicio o la revocación percentenant de vidre achat nons nermetre de percente de vidre achat nons nermetre de la contra achat nons nermetre de	ou in the unlikely even npra nos permite estar n del producto y verific	egistering your purchase enables us to contact you in the unlikely event of a service update or product recall and werlies your winestip in the entire of the service and the service of contaguers entire when the contaguers are comparable to stated the races of contaguers entire when the service of the ser	nille 🔲 Marque 🔲 Garantie 00 Oakwood Rd, Lake Zurich, IL 60047	
Controlled to the voice received by the section of	vous configurations and a	o da miplobable de modificación dos modestros	1.800.432.ECHO WWW.ECHO-USA.COM	2

MECHO.

NOTES ES-250

# **NOTES**



P41814001001/P41814999999



ECHO, INCORPORATED 400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com